


# USER'S MANUAL PCV

Watt/Watt-hour, Var/Var-hour Transducer

No. 320-701-00 B

October 1989

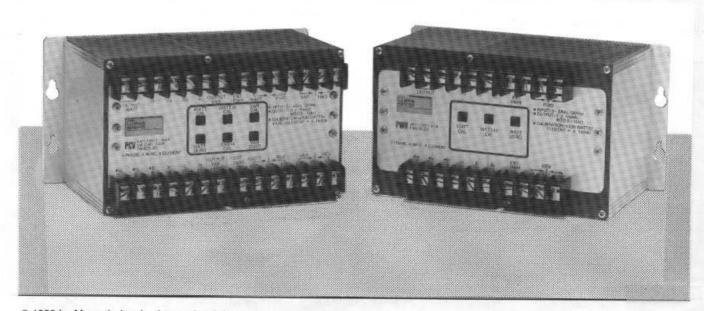

# **Table of Contents**

Introduction		1
Description		1
Calibration		3
Installation		18
Maintenance	ration (	20

# Introduction

This manual contains calibration and installation information for Moore Industries' Watt/Watt-hour, Var/Var-hour Transducer (PCV). A description of the PCV and user maintenance information are also contained in this manual. Associated tables and illustrations are provided for reference purposes.

This manual contains *notes* that must be observed to avoid minor inconveniences during calibration or installation of the PCV. The following definition describes these captions:

A **NOTE** shall contain technical or literary information of a helpful nature. This information is intended to aid the reader's understanding of the subject being discussed and/or minimize inconveniences while performing technical tasks.

# Description

The PCV is designed to accurately measure the true root-mean-square (rms) active and reactive power consumed by electrical equipment or systems. It electronically computes this consumption and produces analog and pulse outputs, which are proportional to the input. The PCV is a highly accurate multiplying device that offers excellent long term stability. Also, it requires only minor periodic maintenance and operates virtually unattended.

The PCV produces a watt and var output (analog), and a watt-hour and var-hour output (pulse) from voltage and current inputs. This ac energy transducer is factory-configured as a 1-, 1.5-, 2-, 2.5-, or 3-element (inputs) device.

A 1-element device accepts one voltage input and one current input. A 1.5-element device accepts one voltage input and two current inputs. A 2-element device accepts two voltage inputs and two current

inputs. A 2.5-element device accepts two voltage inputs and three current inputs. A 3-element device accepts three voltage inputs and three current inputs. The combination of voltage and current inputs from each element are summed together to produce the analog and pulse outputs.

The PCV is factory-configured to predetermined specifications from a variety of available input and output ranges (see table 1). Its outputs are configured to meet a number of applications where remote indication and/or automatic control functions are required.

The PCV is powered by one of two means: an external 120/240Vac source or an internally generated voltage obtained from the voltage input.

The PCV is packaged in an extruded aluminum enclosure, and is available in either a surface-mount (SM) or DIN-rail-mount (DM) housing. Units with relay outputs must be mounted in a vertical position on a DIN rail or a vertical plane. Units with solid-state outputs may be mounted in any position.

Each PCV is individually configured to meet the application needs of the user. This manual does not cover all possible configurations individually. However, the following is a list of options available with the PCV:

a 50Hz input frequency (option 50H)

- a 400Hz input frequency (option 400H)
- a 85-135Vac external power (option 120AC)
- a 170-270Vac external power (option 240AC)
- a 25-125 percent calibration range (option CAL)
- a case ground terminal (option CG, SM units
- only)

Table 1 contains the PCV equipment specifications; including input and output options, power requirements, and performance characteristics. For information about input or output ranges not shown in table 1, users should contact Moore Industries or their local representative.

# PCV

Model Number. The PCV model number describes the equipment type, functional characteristics, operating parameters, and configuration options. If all other documentation is missing, this number can be used to identify equipment characteristics. The model number is printed on a label that is attached to the right-side of the unit.

Serial Number. Moore Industries maintains a complete history on every unit it sells and services. This information is keyed to the serial number. When service information about the PCV is required, it is necessary to provide the factory with this number. The serial number is printed on the same label as the unit model number.

Table 1. PCV Equipment Specifications

Characteristic	Specification			
Input*	Voltage: 69, 120, 240, 460, or 600Vac (refer to table 2) Full Scale Current: 0 to 1, 2, 5, 10, or 25 amp (refer to table 3) Configurations: 1-, 1.5-, 2-, 2.5-, and 3-elements			
Output*	Analog: 0, ±1mA; 0 to 1mA; 4 to 20mA; or 4 to 20mA, bidirectional Pulse: Compute counts per hour (CPH) at full scale Pulse Type: Solid-state, bidirectional (PRB) and unidirectional (PRU); mercury wetted, bidirectional (RMB) and unidirectional (RMU) (RMB and RMU units must be mounted vertically for relays to function properly) Solid-state Output: Open collector transistors; 1.5W, 50V, maximum Pulse Frequency: ±0.2%, standard Full Scale CPH: Unidirectional, 2 to 20,000; Bidirectional, 2 to 20,000 CPH Output Contacts: SPDT (form C) mercury-wetted, 100W, 500V, maximum; contact resistance: 50 milliohms, maximum			
Performance	Operating Frequency: 60Hz, standard Response Time: To 90%, less than 200ms; to 99%, less than 400ms Output Ripple (peak): Less than 0.5% of full scale Surge Withstand Capability: 5KV; ANSI-C37.90a-1974 (IEEE 472), BEAMA 219 Accuracy: At 77°F, ±4°F (25°C, ±2°C) Watt: 0.19% R Cos 9 , ±0.01% F.S. (R = Reading)			
	Var: $\frac{0.19\% \text{ R}}{\text{Sin 9}}$ , ±0.01% F.S. (R = Reading)			
Power	External: 120 or 240Vac			
Adjustments	Six multiturn potentiometers: WATT CAL and VAR CAL: adjusts for full scale analog output at 100% input WATT ZERO and VAR ZERO: adjusts for minimum analog output WATT-H CAL and VAR-H CAL: adjusts pulse output rate to full scale with 100% input			
Operating Temperature	Ambient: -4 to 158°F (-20 to 70°C) Humidity: 0-95%, non-condensing			

NOTE: See Installation section for physical dimensions.

Nominal Input	Potential Range with Accuracy (Self-powered)*	Potential Range with Accuracy (External Power)	Maximum Burden at Nominal	Potential Overload Continuous (External Power)
69V	50-78V	0-90V	0.02VA	100V
120V	85-135V	0-150V	0.02VA	180V
240V	170-270V	0-300V	0.02VA	350V
460V	325-520V	0-575V	0.02VA	680V
600V	425-675V	0-750V	0.02VA	900V

Table 2. Typical Input Voltages

Input	Overrange with Accuracy	Maximum Burden	Overload Continuous	Overload 10 sec/hour	Overload 1 sec/hour
0-1A	2A	0.5VA	ЗА	6A	100A
0-2A	4A	0.5VA	6A	12A	150A
0-5A	10A	0.5VA	15A	30A	250A
0-10A	20A	0.5VA	35A	74A	300A
0-25A	35A	0.5VA	35A	75A	300A

Table 3. Typical Input Current

# Calibration

Every PCV is factory-calibrated to user specifications prior to shipment. This calibration ensures that every unit meets the user's performance requirements before it leaves the factory.

Moore Industries uses sophisticated equipment to calibrate the PCV. However, should the need arise to checkout or calibrate the PCV in the field, the user should read this section carefully before making any adjustments to the unit. If questions arise, the user is advised to contact Moore Industries' Customer Service Department for assistance.

### Preliminary

In determining the need for calibration, the unit's analog and pulse outputs must be checked closely. The desired outputs must be attainable from correct jumper settings and potentiometer adjustments. Also, the unit must be supplied with inputs that have known values.

Jumpers. Solderless jumpers are used for coarse setting of the pulse output rate. To verify or change jumper settings in the field, partial disassembly of the unit is required. Six slotted screws along the outer edge of the front panel secure it to the housing. To access the jumpers, these six outer screws must be removed and the front panel pulled away from the housing (see figure 1).

<sup>\*</sup> Self-powered units have a potential burden of less than 5VA on terminals 3 and 4.

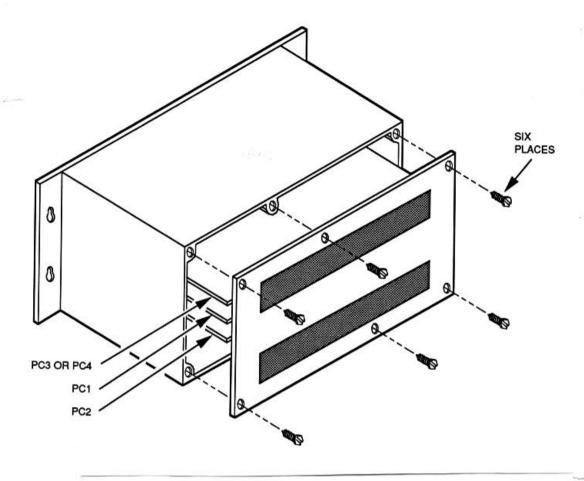


Figure 1. PCB Access Diagram

Attached to the inside of the front panel are three printed circuit (PC) boards. The first set of jumpers are located on the component-side of PC3 or PC4, and the second set are on the left side of PC1 and PC2.

Units configured with mercury-wetted relays (options RMB or RMU) are vertical-mount units, only. These units use PC3. Table 4 contains the output-rate jumper settings for PC3. One complete duty cycle of a relay-output unit is equal to two transitions of the relay (2 pulses). The first column of table 4 lists the course pulse output rate achieved by setting the corresponding jumpers. Figure 2 shows the jumper locations and designations for PC3.

Units configured for solid-state outputs (options PRB or PRU) are horizontal-mount units. These units use PC4. Table 5 contains the output-rate jumper settings for PC4. Only one pulse is generated per duty cycle in units with solid-state outputs. The first column of table 5 lists the course pulse output rate achieved by setting the corresponding jumpers. Figure 3 shows the jumper locations and designations for PC4.

#### NOTE

Either PC3 or PC4 is used in the PCV, but not both in the same unit.

Table 4. PC3 Jumper Settings

Pulse Output Rate (CPH)		Jur	nper Positio	ns*	
RMB/RMU	J301 J306	J302 J307	J303 J308	J304 J309	J305 J310
Option	J311 J316	J312 J317	J313 J318	J314 J319	J315 J320
14062	0	0	0	0	0
7031	1	0	0	0	0
3515	0	1	0	0	0
1758	1	1	0	0	0
879	0	0	1	0	0
439	1	0	1	0	0
220	0	1	1	0	0
110	1	1	1	0	0
54.93	0	0	0	1	0
27.46	1	0	0	1	0
13.73	0	1	0	1	0
6.86	1	1	0	1	0
3.43	0	0	1	1	0

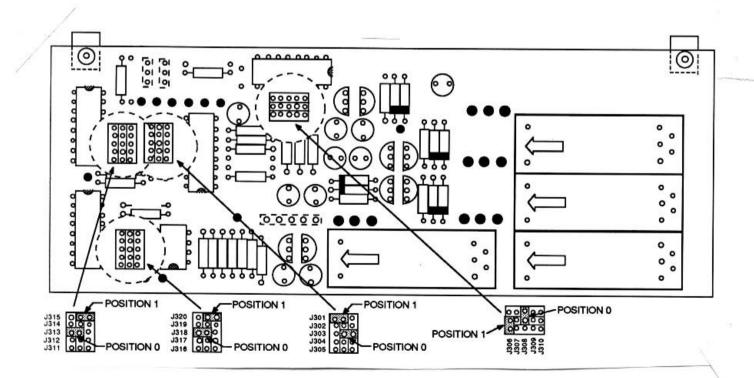


Figure 2. PC3 Jumper Locations

Table 5. PC4 Jumper Settings

Pulse Output Rate (CPH)		Jur	nper Positio	ns*	
PRB/PRU	J401 J406	J402 J407	J403 J408	J404 J409	J405 J410
Option	J411 J416	J412 J417	J413 J418	J414 J419	J415 J420
28125	0 - 1	1	1	0	1
14062	0	1	1	1	1
7031	0	0	0	0	0
3515	1	0	0	0	0
1758	0	1	0	0	0
879	1	1	0	0	0
439	0	0	1	0	0
220	1	0	1	0	0
110	0	1	1	0	0
54.93	1	1	1	0	0
27.46	0	0	0	1	0
13.73	1	0	0	1	0
6.86	0	1	0	1	0
3.43	1	1	0	1	0
1.72	0	0	1	1	0

POSITION 0 POSITION 1 POSITION 1 POSITION 1 POSITION 1 POSITION 0 POSITION 1 POSITION 1

Figure 3. PC4 Jumper Locations

Jumpers on PC3 and PC4 are set based on the desired output. After determining a suitable pulse output rate, locate the next highest number in the first column of table 4 or 5. Jumper positions listed across that row are the required settings to generate the course pulse output listed. All jumpers must be used, except on unidirectional units.

Figures 4 and 5 show the location of the second set of course output-rate jumpers. The jumpers on PC1 and PC2 bring the output rate, set by the jumpers on PC3 or PC4, to within 5 percent of the desired pulse rate. To determine which jumpers to set, the desired output rate is divided by the output rate listed in table 4 or 5. The percentage derived from this is matched with the nearest number (listed in percent) in the first column of table 6. Jumpers listed across that row are the required settings to bring the pulse rate to within 5 percent of the desired output rate.

Refer to the calibration procedures in this manual for step-by-step instructions in setting these jumpers.

Table 6. PC1 and PC2 Jumper Settings

Percent of Required Input	Set Jumper(s)	
100	JA,	
95	JA, JD	
90	JA, JE	
88	JB, JC, JD	
86	JA, JD, JE	
80	JB, JD	
77	JB, JC, JE	
76	JC, JD	
70	JB, JC, JD, JE	
66	JB, JE	
60	JC, JE	
57	JB, JD, JE	
51	JC, JD, JE	

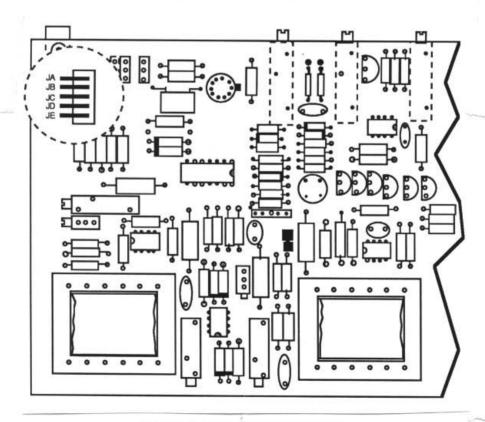


Figure 4. PC1 Jumper Locations

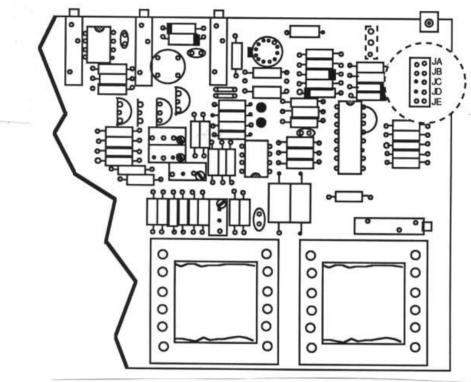


Figure 5. PC2 Jumper Locations

Adjustments. There are six potentiometer adjustments used during calibration. These three adjustments are accessible on the front panel and are labeled WATT CAL, WATT ZERO, WATT-H CAL, VAR CAL, VAR ZERO, and VAR-H CAL. The WATT CAL, WATT ZERO, VAR CAL, and VAR ZERO potentiometers affect the analog outputs. While the WATT-H CAL and VAR-H CAL potentiometers fine adjusts the pulse outputs.

Inputs. For calibration, full scale inputs are required. Each unit has been individually set at the factory for predetermined inputs and outputs. A label attached to the side of the unit identifies the full scale inputs required. These full scale inputs must be supplied to the PCV to properly calibrate the unit.

### Setup

Table 6 lists the equipment required to checkout or calibrate the PCV. This equipment is not supplied with the unit and must be furnished by the user. The user should ensure that equipment used for these procedures meets the minimum specifications listed in table 6.

Figures 6 through 10 are the calibration setup diagrams for the 1-, 1.5- 2-, 2.5-, and 3-element PCVs. Refer to the applicable illustration for the type unit being calibrated.

Table 6. Calibration Equipment

Equipment	Characteristics			
Wattmeter	600 watts full scale; accuracy of $\pm$ 0.05%			
DC Current Meter (DVM)	1mA full scale; four digit display minimum; accuracy of ±0.05%			
AC Voltmeters (2)	1) Range: 0-150Vac, accuracy of ±0.5% 2) Range: 0-1Vac, accuracy of ±0.5%			
DC Power Supply	15 volt, capable of driving 10mA			
Counter/Timer	Minimum of four-digit display, accuracy of ±0.05%			
3-Position Switch	AC current rating that surpasses current supplied to PCV			
Test Load	1000 watt electric heater or similar load			
Resistor	10K ohm, 5% tolerance			
Resistor	0.1 ohm, 3W, ±1%			
Variable Resistor	50 ohm, 1000W			
Inductor	50-100mH, 5 ohm maximum, 120Vac, 5A rating			

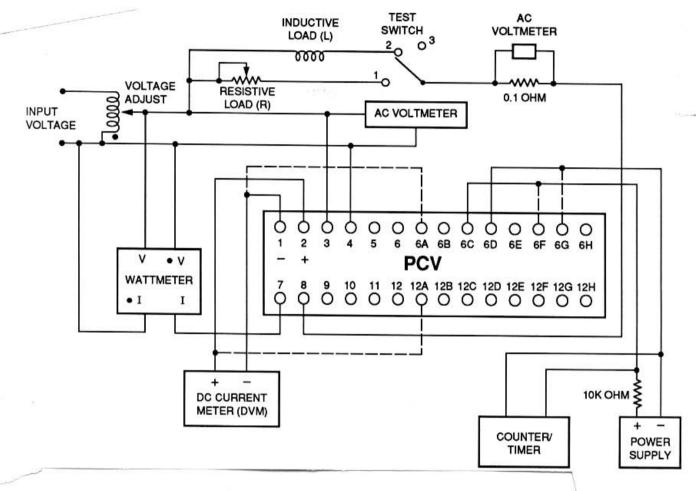


Figure 6. Calibration Setup, 1-element PCV

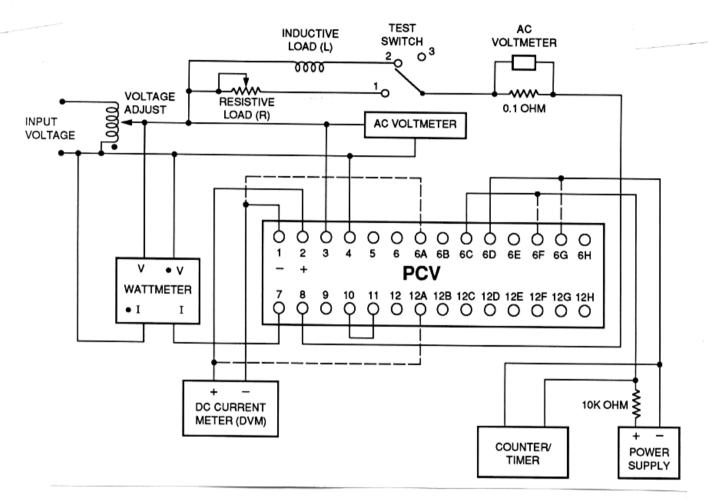


Figure 7. Calibration Setup, 1.5-element PCV

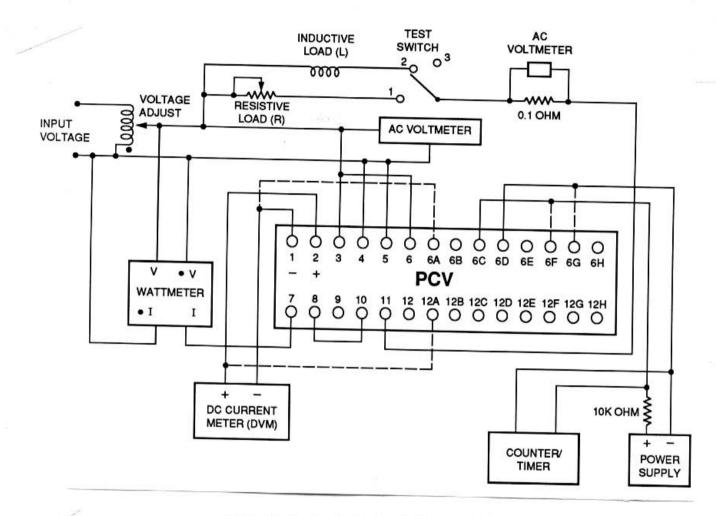


Figure 8. Calibration Setup, 2-element PCV

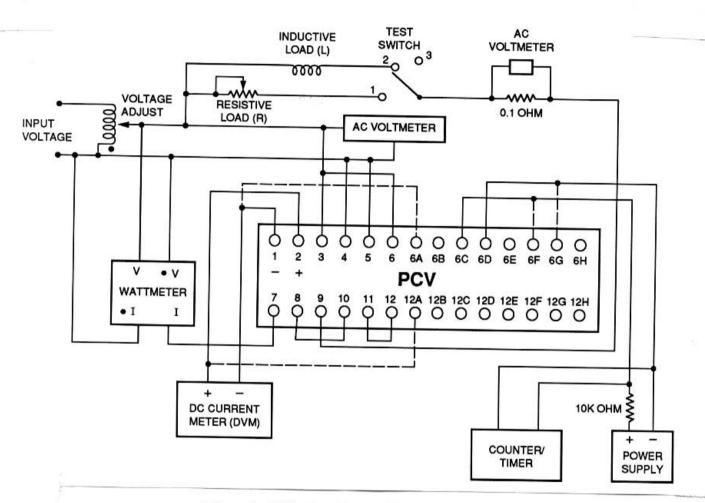


Figure 9. Calibration Setup, 2.5-element PCV

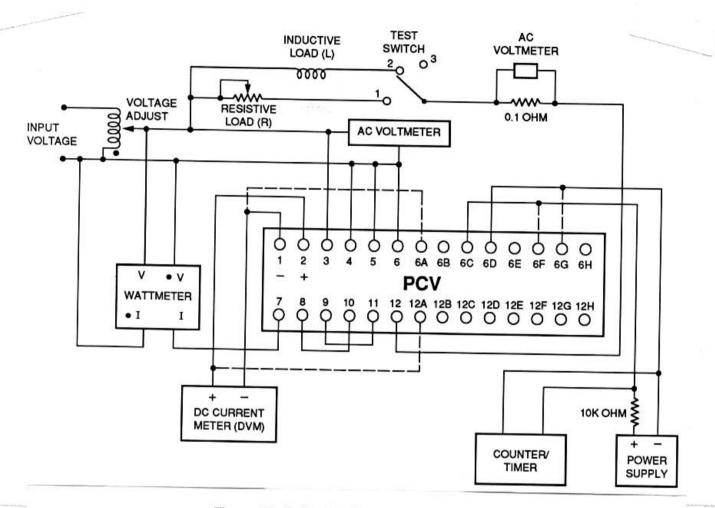


Figure 10. Calibration Setup, 3-element PCV

#### **Procedures**

The following calibration procedures pertain to all five PCV configurations. These procedures are written for a PCV configured for 120Vac, 5A input (500 watt/vars per element) and 0-1mA output. In the case of 1.5-element units, the input power must be 250 watts instead of 500. For 2.5-element units, the input power must be 374 watts. Make appropriate adjustments to input and output values if the unit being calibrated is configured differently than described here.

Although the analog output and the pulse output procedures are separate, the same illustration is used for both.

#### NOTE

Ensure equipment is connected as shown in the appropriate illustration. After calibrating the watt outputs, disconnect the equipment from the watt output terminals ONLY, and connect them to the var output terminals as shown by the dashed lines in the illustrations.

#### Watt Analog Output:

- Set AC test switch to position 3.
- Monitor AC voltmeter and adjust input voltage for 120Vac reading.
- Check DC current meter; if a reading other than zero is detected, adjust WATT ZERO potentiometer on PWH for a zero reading (minimum output).
- Set AC test switch to position 1.
- Monitor wattmeter and adjust input current until meter reads 500 watts (full scale input).
- Monitor DC current meter and adjust WATT CAL potentiometer on PWH for 1.000mA reading (maximum specifed output).
- Check linearity by adjusting current up and down within specified range, and compare readings on wattmeter and DC current meter. Readings should be proportional.

#### Watt Pulse Output:

- Calculate number of counts-per-hour (pulse rate) output for full scale input as follows:
  - Determine what the pulse output represents (e.g., 1 pulse per watthour, 1 pulse per 2 watthours, etc.)
  - Identify the number of elements on unit and amount of full scale power to be input per element (e.g., 3-element, 500 watts)

#### NÖTE

Use "2" for 1.5-element units and "3" for 2.5-element units in step 1.b.

- Multiply full scale input power by number of elements on unit (e.g., 500 X 3 = 1500 watts)
- d. Divide full scale input power by the amount of energy each pulse should represent (e.g., 1500 watts/1 watthour = 1500 counts per hour, 1500 watts/2 watthours = 750 counts per hour, etc.)
- Calculate time between each pulse by dividing 1 hour (3600 seconds) by number of output pulses derived in step 1.d. (e.g., 3600 seconds/1500 counts per hour = 2.4 seconds per pulse)
- Monitor frequency counter and record period displayed. If this time is within 5 percent of required time (calculated in step 2), adjust WATT-H CAL potentiometer on front panel of PWH to set time as required.
- If frequency counter reading has more than a 5 percent difference from that required, remove AC input and/or AC power from unit.
- Remove and retain six slotted screws from outer edge of PWH front panel (see figure 1).
- Pull front panel, with PCs attached, away from PCV housing.

# **PCV**

 Set jumpers on PC3 or PC4 as called out in tables 4 or 5 for the type output option for which PCV is configured. See figures 2 or 3.

#### Example:

Desired counts per hour: 1500

Type output: PRB

Next highest number in table 4: 1750

#### SET JUMPERS:

J401, J406 to position 0

J402, J407 to position 1

J403, J408 to position 0

J404, J409 to position 0

J405, J410 to position 0

#### NOTE

Unidirectional outputs use only J301 through J305, or J401 through J405.

 Calculate the percentage of output by dividing number of counts per hour by number used from table 4.

#### Example:

1500 + 1750 = 85.7%

 Set jumpers on PC1 as called out in table 5 to the nearest percent number listed in the first column. See figures 1 and 4.

#### NOTE

Install only the jumpers listed. Remove unused jumpers from PC1.

#### Example:

Actual percentage: 85.7%

Nearest percentage listed in table 5: 86%

SET JUMPERS: JA, JD and JE REMOVE JUMPERS: JB and JC

Assemble PWH and connect 500 watt input (full scale).

- Check frequency counter reading; reading should be within ±3 percent of the required time (e.g., 2.4 seconds ±0.072 second).
- Adjust WATT-H CAL potentiometer on front panel of PWH to bring frequency counter reading to within ±0.1 percent of required time (e.g., 2.4 seconds ±0.0024 second).
- If unit cannot be adjusted to required time, disconnect input and/or AC power and repeat steps 1 through 12. Ensure all jumper settings are correct.

#### Var Analog Output:

- Set AC test switch to position 3.
- Monitor AC voltmeter and adjust input voltage for 120Vac reading.
- Check DC current meter; if a reading other than zero is detected, adjust VAR ZERO potentiometer on PCV for a zero reading (minimum output).
- Set AC test switch to position 2.
- Note reading on AC voltmeter (measued across 0.1 ohm resistor).
- Calculate current through PCV by dividing voltmeter reading taken in step 5 by 0.1 ohm.
- Set AC test switch to position 1.
- Adjust resistive load until current reading is the same as in step 6.
- With AC test switch in position 1, note wattmeter reading (reading number 1).
- Set AC test switch to position 2 and note wattmeter reading (reading number 2).
- Calculate power factor of inductive load by dividing reading number 2 (step 10) by reading number 1 (step 9).

 With AC switch in position 2, adjust VAR CAL potentiometer on PVH to the output current value derived from the following formula:

Reading #1 x sin [arccos( Reading #2)] x 1mA = I<sub>out</sub>

(\* Use 250W for 1.5-element units or 374W for 2.5-element units)

Example: Reading #1 = 400W Reading #2 = 200W

 $\frac{400W}{500W}$  x Sin [arccos ( $\frac{200W}{400W}$ )] x 1mA

- a. 200W + 400W = 0.5 (power factor of inductive load)
- b. arccos 0.5 = 60° (phase angle)
- c. sin (arccos 0.5) = sin (60°) = 0.866 or 86.6% (reactive power applied to PVH; vars)
- d. 400W + 500W = 0.8 or 80% (percentage of full scale input to be applied)
- e. 0.8 x 0.866 x 1mA = 0.6928mA (target output current adjustment)

#### Var Pulse Output:

- Calculate number of counts-per-hour (pulse rate desired) output for full scale input as follows:
  - Determine what the pulse output represents (e.g., 1 pulse per var-hour, 1 pulse per 2 var-hours, etc.)
  - Identify the number of elements on unit and amount of full scale power to be input per element (e.g., 3-element, 500 vars/element)

#### NOTE

Use "2" for 1.5-element units and "3" for 2.5-element units in step 1.b.

 Multiply full scale input power by number of elements on unit (e.g., 500 X 3 = 1500 vars)

- Divide total full scale input by amount of desired time (in var-hours) between each pulse (e.g., 1500 vars/1 var-hour = 1500 counts per hour, 1500 vars/2 var-hours = 750 counts per hour, etc.)
- Connect power supply and counter/timer to terminal 6E and 6F (see appropriate calibration setup)
- 3. Set AC test switch to position 2.
- Note reading on AC voltmeter (measured across 0.1 ohm resistor).
- Calculate current through PVH by dividing voltmeter reading taken in step 4 by 0.1 ohm.
- 6. Set AC test switch to position 1.
- Adjust resistive load until current is the same as derived in steps 4 and 5.
- With AC test switch in position 1, note wattmeter reading (reading number 1).
- Set AC test switch to position 2 and note wattrneter reading (reading number 2).
- Calculate the percentage of output current derived from the following formula:

Reading #1

500W \* x Sin [arccos( Reading #2 )] = % output

(\* Use 250W for 1.5-element units or 374W for 2.5-element units)

- Multiply counts per hour derived in step 1.d. by percentage of output current derived in step 10 (e.g., 1500 CPH x .667 = 1000 CPH).
- Calculate time between each pulse by dividing 1 hour (3600 seconds) by counts per hour derived in step 11 (e.g., 3600 seconds/1000 counts per hour = 3.6 seconds).
- 13. Monitor counter/timer and record time displayed.

# **PCV**

If this time is within 5 percent of required time (calculated in step 12), adjust VAR-H CAL potentiometer on front panel of PCV to set time as required.

#### NOTE

For relay outputs, the time required is twice that calculated in step 11. During calibration, only terminals 6B and 6C or 6E and 6F are used, which pulses once for every two counts. In normal operation, terminals 6B, 6C and 6D, or 6E, 6F and 6G are used.

- If frequency counter reading has more than a 5 percent difference from that required, remove AC input and/or AC power from unit.
- Remove and retain six slotted screws from outer edge of PCV front panel (see figure 1).
- Pull front panel, with PCs attached, away from PCV housing.
- Set jumpers on PC3 or PC4 as called out in table 4 or 5 for the type output option for which PCV is configured. See figure 2 or 3, as applicable.

Example: Desired counts per hour: 1500

Type output: PRB

Next highest number in table 5: 1750

Set Jumpers: J411, J416 to position 0

J412, J417 to position 1

J413, J418 to position 0

J414, J419 to position 0

J415, J420 to position 0

#### NOTE

Unidirectional outputs use only J311 through J315, or J411 through J415.

 Calculate the percentage of output by dividing desired number of counts per hour by number used from table 5 (e.g.,1500 (desired) + 1750 = 85.7%).  Set jumpers on PC2 as called out in table 6 to the nearest percent number listed in the first column. See figures 1 and 5.

#### NOTE

Install only the jumpers listed. Remove unused jumpers from PC2.

Example: Actual percentage: 85.7%

Nearest percentage listed in table 6: 86%

Set Jumpers: JA, JD and JE Remove Jumpers: JB and JC

- Assemble PCV and reconnect to calibration setup, as applicable.
- Check frequency counter reading; reading should be within ±5 percent of the time calculated in step 12.
- Adjust VAR-H CAL potentiometer on front panel of PCV to bring frequency counter reading to within ±0.1 percent of required time.
- If unit cannot be adjusted to required time, disconnect input and/or AC power and repeat steps 1 through 12. Ensure all jumper settings are correct.

## Installation

Installation of the PCV is divided into two phases: mounting and electrical connections. In most cases, it is easier to mount the PCV before completing the electrical connections.

### Mounting

Depending on the housing style and options ordered, the PCV is either surface mounted (SM) or DIN-rail mounted (DM). Figure 11 contains the mounting dimensions for both of these housing styles. When mounting the PCV, ensure it is mounted on a vertical plane in an area free of dust, moisture and corrosive elements.

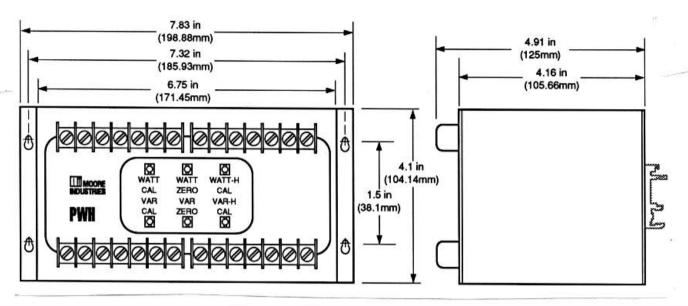


Figure 11. PCV Mounting Dimensions

PCVs ordered with the RMB or RMU output option must be mounted on a vertical plane with their length extended vertically. This positioning is necessary for proper operation of the mercury-wetted relays inside the PCV. The correct upright position is identified by the layout of the unit's front panel. The mounting dimensions for vertical-mount units is the same as those given in figure 11. Figure 12 illustrates a 3-element, vertical-mount front panel for reference purposes. Vertical-mount units are packaged in either an SM or DM housing.

Surface-mount (SM) units may be mounted on any vertical plane. However, it is recommended that the PCV be mounted on a surface that helps dissipate heat away from it, especially if the ambient temperature is unusually high. Surface-mount units have four keyhole cutouts in their mounting plate for easy mounting and removal (see figure 11).

The DIN-rail-mount (DM) housing is designed for mounting on standard DIN rails. The rear of the unit is equipped with two mounting clips (see figure 10), which attach the unit to the rails; either 1.26-inch (32mm) or 1.38-inch (35mm) rails.

#### **Electrical Connections**

Every PCV is equipped with the same number of terminals. The number of elements a PCV is configured for determines which terminals are used for installation. Terminal designations are clearly marked on the front label of each unit. Figures 13 through 17 are installation hookup diagrams for the five PCV configurations.

Terminal connections are made in the same relative positions for both horizontal- and vertical-mount units. A vertical-mount unit is basically a horizontal unit that has been rotated 90 degrees to its left. Vertical-mount units have wetted-relay outputs, which necessitates the vertical mounting orientation. These units use terminals 6C, 6D and 6E for the forward (FWD) watt-hour pulse output, and terminals 12C, 12D and 12E for the reverse (REV) output. Terminals 6F, 6G and 6H are all used for the lagging (LAG) var-hour pulse output, and 12F, 12G and 12H for the leading (LEAD) output.

Horizontal-mount units have solid-state outputs, and use only two terminals for any of the outputs described above. See front panel label of unit being installed.

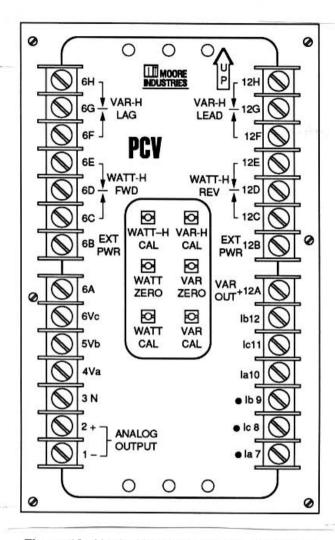


Figure 12. Vertical Mount Front Panel (Example)

### Operation

Since there are no LEDs or digital displays to monitor on the PCV, it operates unattended. However, the PCV may become warm during normal operation, especially if the ambient temperature is unusually high. This operating condition is normal for power transducers and should not cause alarm, unless a malfunction is also detected.

# Maintenance

The PCV is built with highly reliable components, which allows this device to operate unattended for extended periods of time. Because of this high reliability, field maintenance is limited to ensuring that wire terminals on the unit are clean and tight. It is recommeded that the PCV be inspected for mounting security, terminal corrosion and general cleanliness at least once every six months.

For additional technical asistance, or to obtain related product drawings, contact Moore Industries' Customer Service Department by dialing 1-800-999-2900.

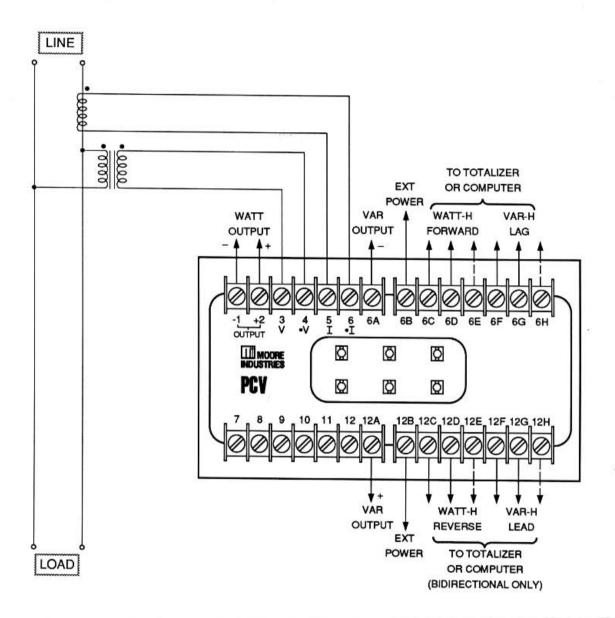


Figure 13. Installation Hookup, 1-element PCV

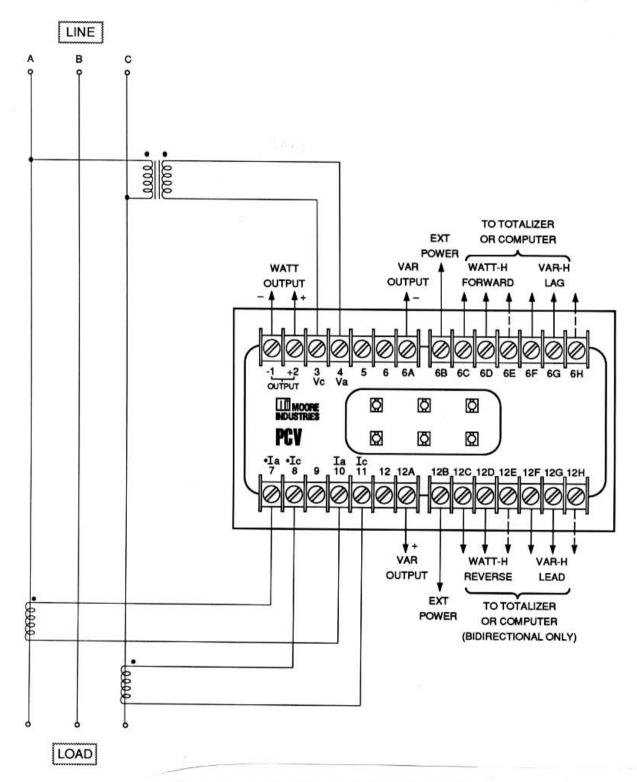


Figure 14. Installation Hookup, 1.5-element PCV

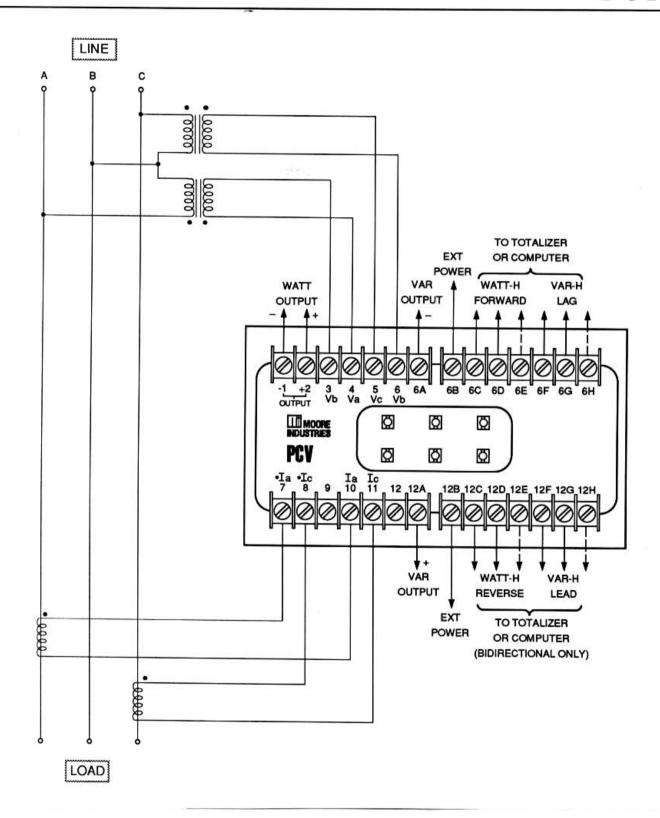


Figure 15. Installation Hookup, 2-element PCV

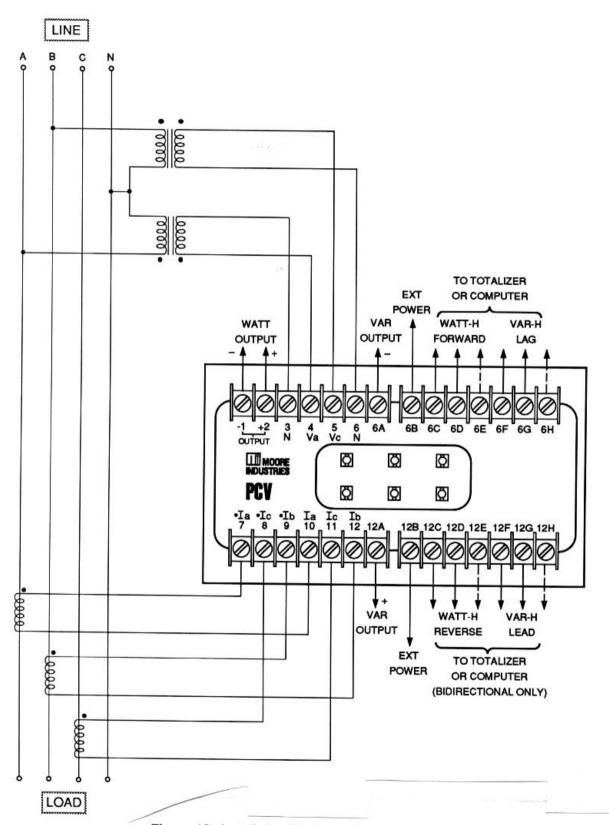


Figure 16. Installation Hookup, 2.5-element PCV

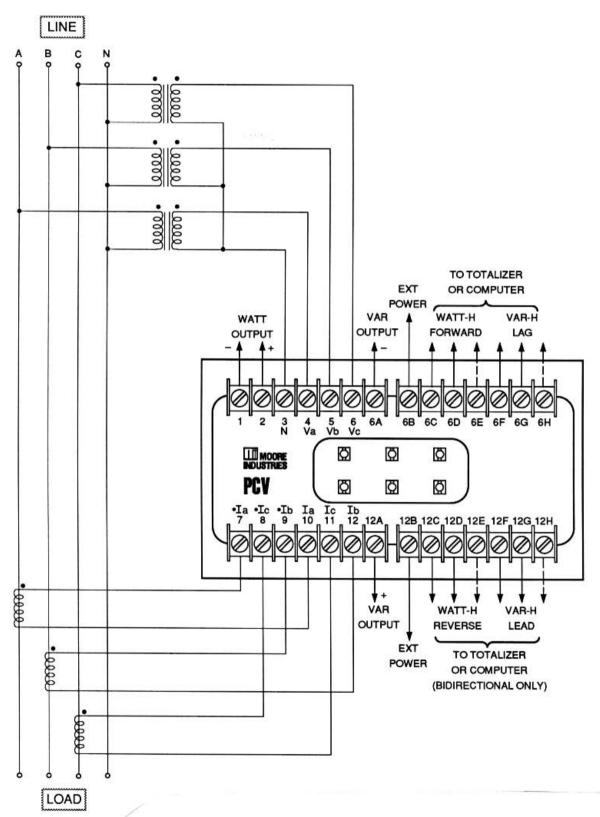


Figure 17. Installation Hookup, 3-element PCV

#### RETURN PROCEDURES

#### To return equipment to Moore Industries for repair, follow these four steps:

1. Call Moore Industries and request a Returned Material Authorization (RMA) number.

#### Warranty Repair –

If you are unsure if your unit is still under warranty, we can use the unit's serial number to verify the warranty status for you over the phone. Be sure to include the RMA number on all documentation.

#### Non-Warranty Repair -

If your unit is out of warranty, be prepared to give us a Purchase Order number when you call. In most cases, we will be able to quote you the repair costs at that time. The repair price you are quoted will be a "Not To Exceed" price, which means that the actual repair costs may be less than the quote. Be sure to include the RMA number on all documentation.

- 2. Provide us with the following documentation:
  - a) A note listing the symptoms that indicate the unit needs repair
  - b) Complete shipping information for return of the equipment after repair
  - c) The name and phone number of the person to contact if questions arise at the factory
- Use sufficient packing material and carefully pack the equipment in a sturdy shipping container.
- 4. Ship the equipment to the Moore Industries location nearest you.

The returned equipment will be inspected and tested at the factory. A Moore Industries representative will contact the person designated on your documentation if more information is needed. The repaired equipment, or its replacement, will be returned to you in accordance with the shipping instructions furnished in your documentation.

#### WARRANTY DISCLAIMER

THE COMPANY MAKES NO EXPRESS, IMPLIED OR STATUTORY WARRANTIES (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE) WITH RESPECT TO ANY GOODS OR SERVICES SOLD BY THE COMPANY. THE COMPANY DISCLAIMS ALL WARRANTIES ARISING FROM ANY COURSE OF DEALING OR TRADE USAGE, AND ANY BUYER OF GOODS OR SERVICES FROM THE COMPANY ACKNOWLEDGES THAT THERE ARE NO WARRANTIES IMPLIED BY CUSTOM OR USAGE IN THE TRADE OF THE BUYER AND OF THE COMPANY, AND THAT ANY PRIOR DEALINGS OF THE BUYER WITH THE COMPANY DO NOT IMPLY THAT THE COMPANY WARRANTS THE GOODS OR SERVICES IN ANY WAY.

ANY BUYER OF GOODS OR SERVICES FROM THE COMPANY AGREES WITH THE COMPANY THAT THE SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF ANY WARRANTY CONCERNING THE GOODS OR SERVICES SHALL BE FOR THE COMPANY, AT ITS OPTION, TO REPAIR OR REPLACE THE GOODS OR SERVICES OR REFUND THE PURCHASE PRICE. THE COMPANY SHALL IN NO EVENT BE LIABLE FOR ANY CONSEQUENTIAL DISCIPLIFIAL DAMAGES EVEN IF THE COMPANY FAILS IN ANY ATTEMPT TO REMEDY DEFECTS IN THE GOODS OR SERVICES, BUT IN SUCH CASE THE BUYER SHALL BE ENTITLED TO NO MORE THAN A REFUND OF ALL MONIES PAID TO THE COMPANY BY THE BUYER FOR PURCHASE OF THE GOODS OR SERVICES.

ANY CAUSE OF ACTION FOR BREACH OF ANY WARRANTY BY THE COMPANY SHALL BE BARRED UNLESS THE COMPANY RECEIVES FROM THE BUYER A WRITTEN NOTICE OF THE ALLEGED DEFECT OR BREACH WITHIN TEN DAYS FROM THE EARLIEST DATE ON WHICH THE BUYER COULD REASONABLY HAVE DISCOVERED THE ALLEGED DEFECT OR BREACH, AND NO ACTION FOR THE BREACH OF ANY WARRANTY SHALL BE COMMENCED BY THE BUYER ANY LATER THAN TWELVE MONTHS FROM THE EARLIEST DATE ON WHICH THE BUYER COULD REASONABLY HAVE DISCOVERED THE ALLEGED DEFECT OR BREACH

#### RETURN POLICY

For a period of thirty-six (36) months from the date of shipment, and under normal conditions of use and service, Moore Industries ("The Company") will at its option replace, repair or refund the purchase price for any of its manufactured products found, upon return to the Company (transportation charges prepaid and otherwise in accordance with the return procedures established by The Company), to be defective in material or workmanship. This policy extends to the original Buyer only and not to Buyer's customers or the users of Buyer's products, unless Buyer is an engineering contractor in which case the policy shall extend to Buyer's immediate customer only. This policy shall not apply if the product has been subject to alteration, misuse, accident, neglect or improper application, installation, or operation. THE COMPANY SHALL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.



WORLDWIDE • www.miinet.com

United States • info@miinet.com Tel: (818) 894-7111 • FAX: (818) 891-2816 Australia • sales@mooreind.com.au Tel: (02) 8536-7200 • FAX: (02) 9525-7296 Belgium • info@mooreind.be Tel: 03/448.10.18 • FAX: 03/440.17.97 The Netherlands • sales@mooreind.nl Tel: (0)344-617971 • FAX: (0)344-615920 China • sales@mooreind.sh.cn
Tel: 86-21-62491499 • FAX: 86-21-62490635
United Kingdom • sales@mooreind.com
Tel: 01293 514488 • FAX: 01293 536852

# **Supplement**

March 1993

This supplement applies to the following manuals:

- PCV, 320-701-00 B, October 1989
- PVH, 318-701-00 A, March 1989
- PWH, 317-701-00 A, February 1989

This supplement corrects an error in the 2.5 element hookup diagrams in each of these manuals. Please note the model type, replacement page and figure number on each of the attached 3 pages.

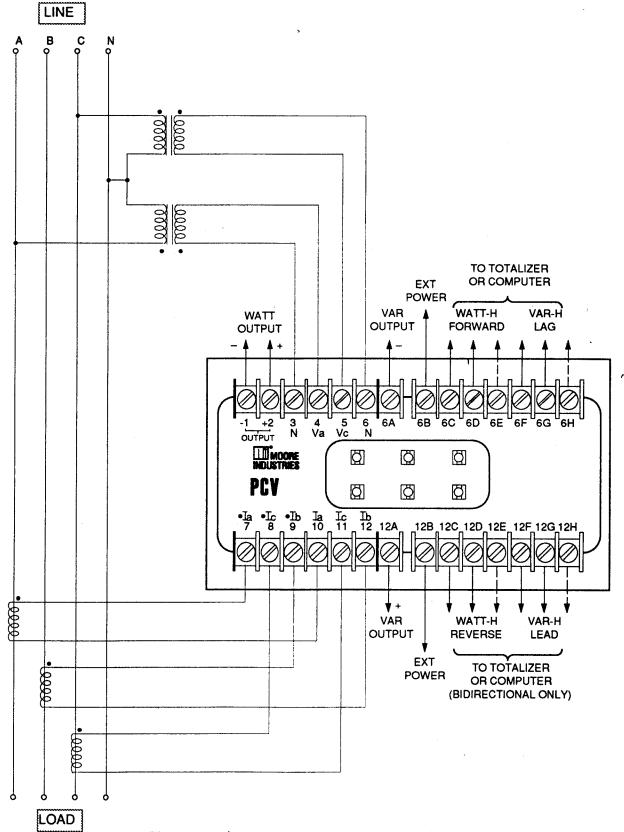


Figure 16. Installation Hookup, 2.5-element PCV


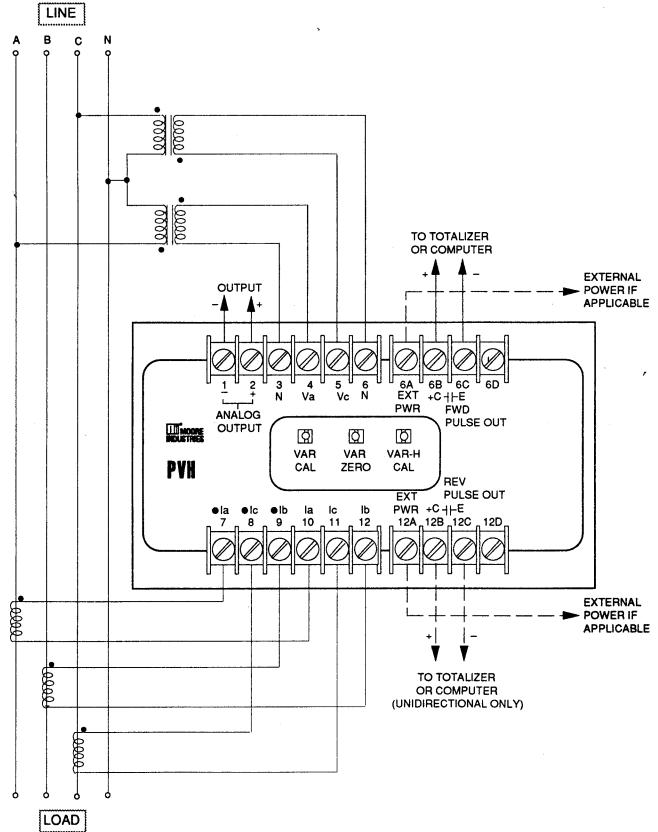


Figure 15. Installation Hookup, 2.5-element PVH

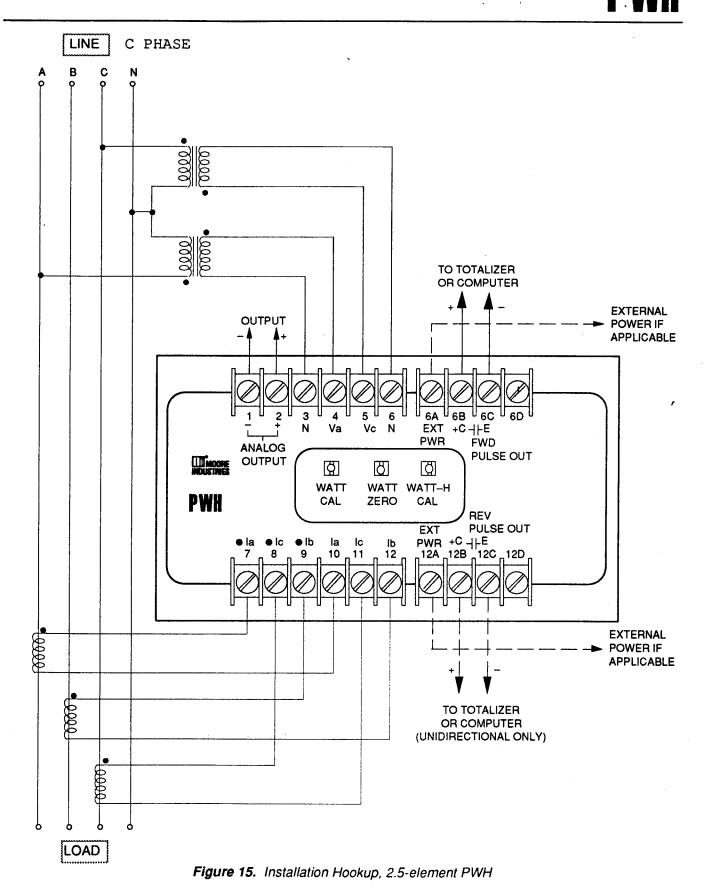

Supplement page 4 of 4