


Smart HART Transmitters, Monitors, and Interfaces

H9: HART pH Transmitter Interface to Control Room

Problem: I just installed a new HART smart pH transmitter. It has great diagnostics but they are only accessible using the handheld communicator. Is there a way to get this information in real time?

Solution: Connect the SPA across the pH signal wires at the back of the panel. It can be configured to monitor the various HART data diagnostic bits and to alarm on out-of-normal conditions of the sensor. You can even set the 4-20mA output to represent the process temperature or the sensor output.

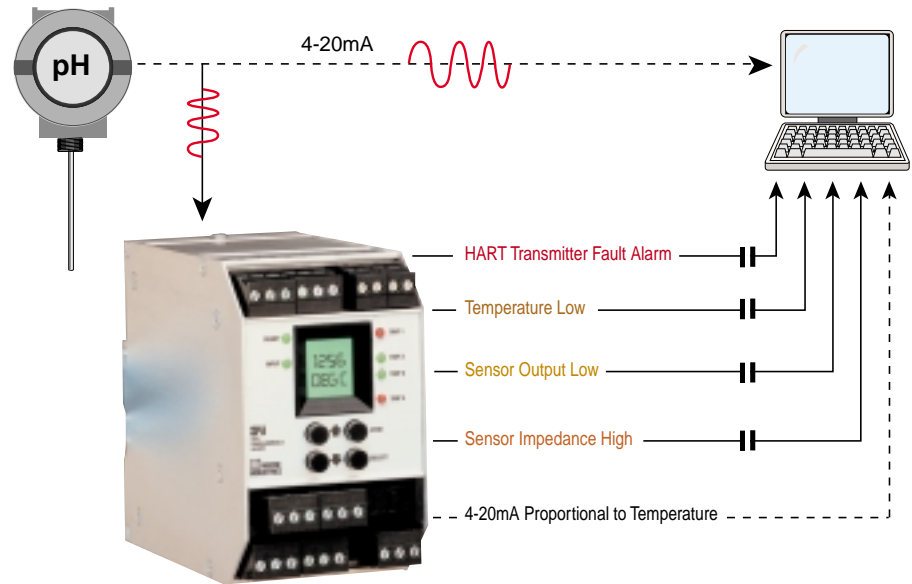

Model Number Example

SPA / HART / 4PRG / U [DIN]

HART is a registered trademark of the HART Communication Foundation.